


7" SQUARE **PORCH COLUMN (PILLAR) INSTALLATION GUIDE**

COLUMN COMPONENTS

(Internal support and fasteners are not included)

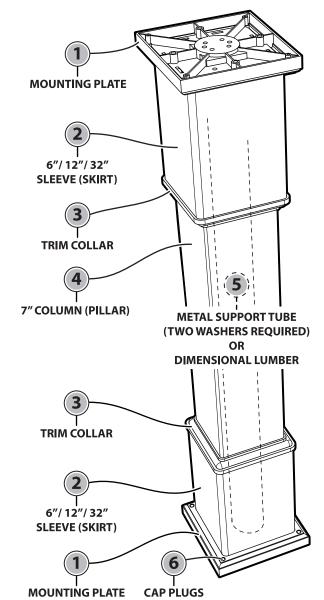

Alpa Ontario Railing Inc.

101 Glidden Road, Brampton, Ontario L6T 3W6 Tel: (905) 796-6631 Fax: (905) 796-8790

IMPORTANT REVIEW ALL **INSTRUCTIONS BEFORE ASSEMBLING COLUMN**

For non-load bearing applications column may be used without an internal support.

For load bearing applications an internal support MUST be used.

All appropriate fasteners are to be supplied by installer and be of a non-corrosive quality.

FASTENERS

STEP 1

Measure vertical opening.

For load bearing applications:


If using dimensional lumber (laminated 2"x4" shown) cut it 1" shorter than overall height.

If using aluminum support tube, cut it 1-1/8" shorter than overall height.

Cut vinyl column 2-1/4" shorter than the overall height to place the entire load on the internal support and allow for thermal expansion.


STEP 2

The mounting plate, trim collar and the 6", 12" or 32" sleeve (skirt) will be pre-assembled for ease of installation.

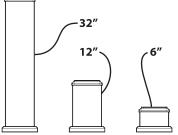

If you have received these components as seperate peices, please follow the steps outlined to the right in step 3.

ALTERNATIVE ASSEMBLY WITHOUT SLEEVE (SKIRT)

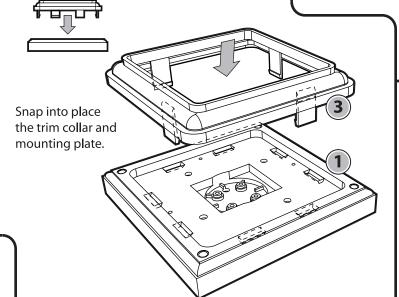


Slide vinyl column along with the dimensional lumber or support tube into mounting plate.

centre it on the mounting plate.


When using a support tube, make sure that support washers are inserted into the mounting plates prior to assembly.


STEP 4

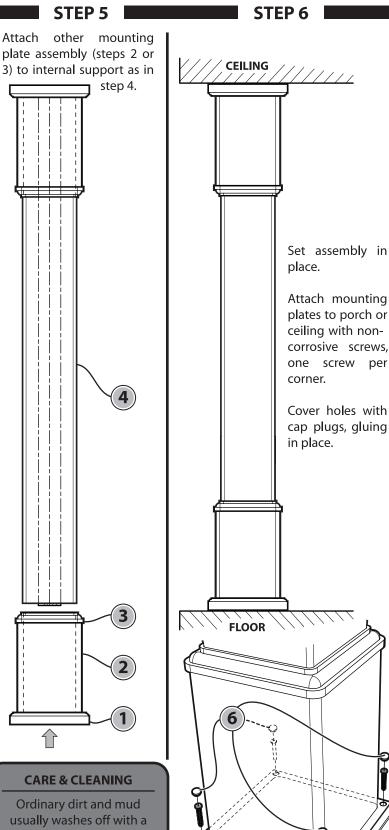



Assemble trim collar to sleeve with 1/2" screws through the


NON-LOAD BEARING INSTALLATION LOAD BEARING INSTALLATION

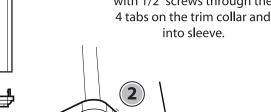


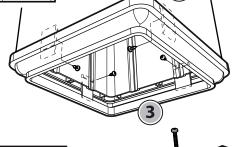

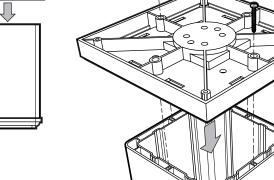

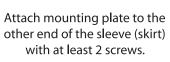

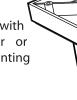

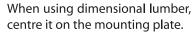

hose. At times it may be necessary to use a nonabrasive household cleaner to remove residue and then rinse with a hose.



IMPORTANT REVIEW ALL **INSTRUCTIONS BEFORE** ASSEMBLING COLUMN

NON-LOAD BEARING INSTALLATION LOAD BEARING INSTALLATION For non-load bearing applications column may be

used without an internal support.

For load bearing applications an internal support MUST be used.

All appropriate fasteners are to be supplied by installer and be of a non-corrosive quality.

FINAL STEP

CEILING

FASTENERS

FOR NON-LOAD BEARING INSTALLATION

FOR LOAD BEARING INSTALLATION

Measure vertical opening.

8" DIAMETER **PORCH COLUMN (PILLAR) INSTALLATION GUIDE**

COLUMN COMPONENTS

(Internal support and fasteners

are not included)

METAL SUPPORT TUBE (TWO WASHERS REQUIRED)

DIMENSIONAL LUMBER

MOUNTING PLATE


8" COLUMN (PILLAR)

Measure vertical opening and cut column to length.

STEP 2

STEP 1

mounting plates with the column.

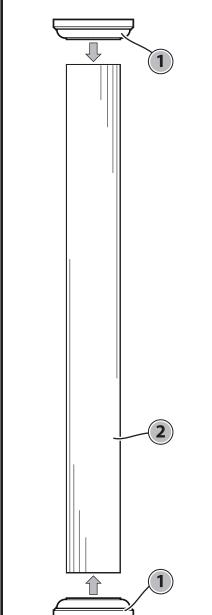

Assemble the top and bottom

Alpa Ontario Railing Inc.

MOUNTING PLATE CAP PLUGS

101 Glidden Road, Brampton, Ontario L6T 3W6 Tel: (905) 796-6631 Fax: (905) 796-8790

STEP 3

Please see FINAL STEP for details.

STEP 1

If using dimensional lumber (laminated 2"x4" shown) cut it 1" shorter than overall

OR

internal support and allow for thermal expansion.

