

# VOLETS 12"&15" SHUTTERS

## Instructions d'installation:

### Important:

Lors du montage des persiennes, vous devez percer un trou de 1/4" avant d'insérer la vis.

### Étape 1:

- Placer la persienne à la position désirée;
- identifier 6 endroits (sur le mur) pour percer;
- marquer les trous sur la persienne.


### Étape 2:

- Placer la persienne horizontalement;
- percer les trous en utilisant une mèche de 1/4".

### Étape 3:

- Placer la persienne en position désirée;
- utiliser les trous comme guides pour percer dans le mur;
- utiliser les 6 vis pour installer la persienne;
- utiliser un tournevis.

N.B. Les vis doivent exercer une légère pression sur la persienne. Ne pas visser celles-ci trop profondément.

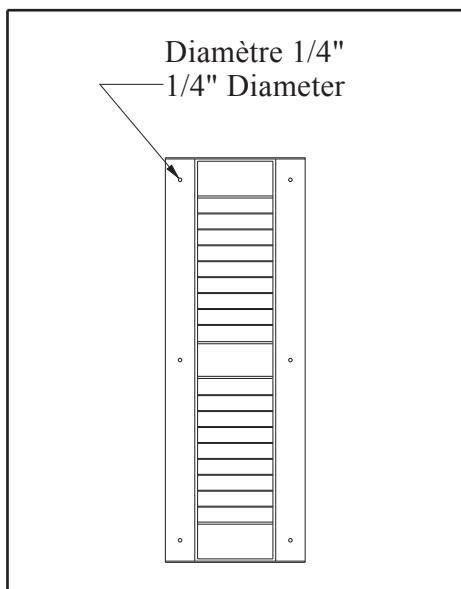

## Installation instructions:

### Important:

When assembling the shutters you must drill a 1/4" hole before inserting the screw.

### Step 1:

- Place shutter in desired position;
- locate 6 places (on the wall) to drill;
- mark locations of the holes on shutter.

### Step 2:

- Place shutter horizontally;
- drill marked holes by using a 1/4" diameter bit.

### Step 3:

- Place the shutter in desired position;
- use holes as a guide, to drill in the wall;
- fasten shutter by using the 6 screws supplied;
- use a screwdriver.

P.S. The screws must apply light pressure on the shutters. Dont' screw them too deeply.

